

**BASEBALL  
TURTLES**



**828-820-8644**



**800-487-7432**

BaseballTips, Inc.

Suppliers of Sports Equipment & Hydration Products - Since 1999



**828-820-8600**

# Pitch Hunter Pro Assembly

Find a flat/even surface to assemble the frame.

Align the ends with the same number together starting with the number 1.

Start with assembling connection points #1-8 first to create the bottom foundation U.


Once bottom is completed, away from the bottom foundation start putting together the top main supports. Put the front support together with connections 9-10, followed by the middle support 11- 12 and lastly the back support 13-14. It is much easier to put them together on the ground rather than up in the air.

Connect the front main roof support by connecting 15 followed by 16. Continue with the middle (17-18) and then the back support (19-20).

With the main supports up start adding the cross members. It is easier to assemble from the back to the front so start with connections 21-22 and 23-24 before continuing. After 21-24 connect 25- 28 followed by 29-32.

Finish the frame by connecting 33, followed by 34-35 to complete the lean bar addition.

Once the frame is fully connected, tighten with hex bolts provided.

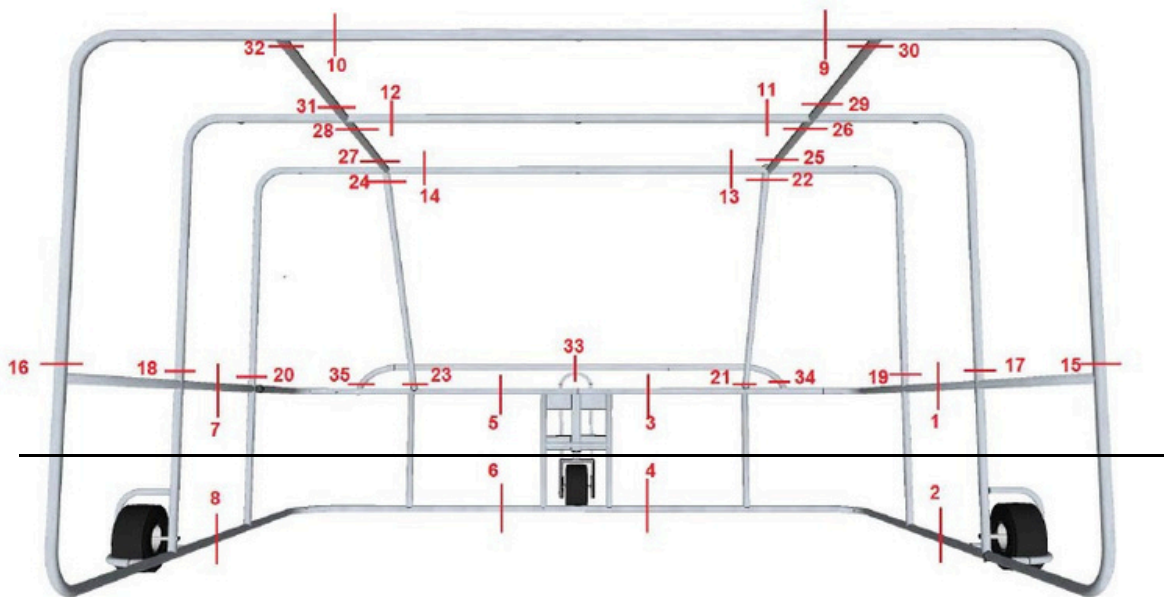


Main Frame Assembly



## Net/Padding/Vinyl Assembly

Begin with installing the padding and vinyl wrap on all rails except for the front top and side bars (section L). If your Pitch Hunter Pro Turtle is not fully padded skip to step 2.

- a. Once ready to install padding and vinyl, slice seam on safe foam stick.
- b. Place safe foam around the pole. At attachment tab locations have the sliced edge open to the tab.
- c. Cut off the excess prior to attaching vinyl. Note safe foam sticks come in 8' lengths and will need to be adjusted accordingly. Some sections of padding/vinyl will consist of multiple pieces of safe foam.
- d. Once pad is around the section you are working on, lay vinyl over that section and attach with the SHORT, HD zip ties.
- e. It is recommended to go in alphabetical order from A thru K. Again do not install section L until Step 7 after installing the netting.

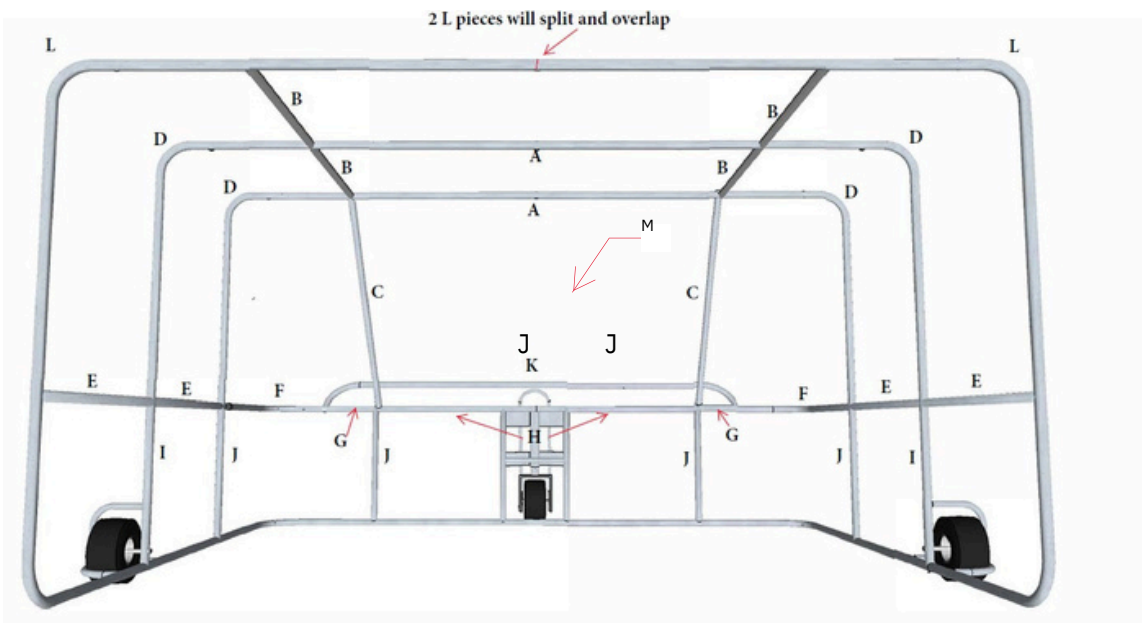

**Vinyl/Padding Layout-ST**

### QTY SIZE

<b>A:</b>	2	10' 4"
<b>B:</b>	4	5' 11"
<b>C:</b>	2	7' 3"
<b>D:</b>	4	9' 6"
<b>E:</b>	4	5' 11"
<b>F:</b>	2	5' 1'
<b>G:</b>	2	4' 4"
<b>H:</b>	2	1' 6"
<b>I:</b>	2	1' 6"
<b>J:</b>	6	3' 2"
<b>K:</b>	1	11'- lean bar
<b>L:</b>	2	18' 6"- front bar
<b>M:</b>	1	1' 4"

# BASEBALL TURTLES



**828-820-8644**



**800-487-7432**

BaseballTips, Inc.


Suppliers of Sports Equipment & Hydration Products - Since 1999




**828-820-8600**

To begin hanging the super turtle net, stretch out the net with the bottom lead rope following the bottom rail. Note there will be a tag at the front, roof portion of the net dictating where the middle of the front is.

Begin hanging net at clip locations 1-6. Note that clips 1, 3, and 5 are on the middle bar and not the front bar as the front bar will be completed last.

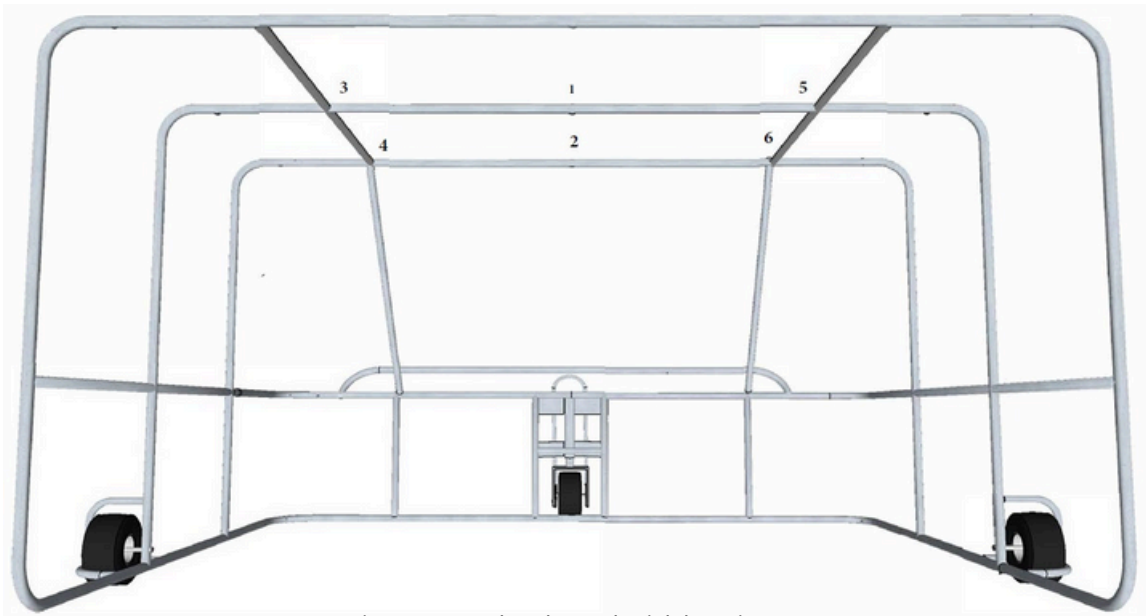

Continue outward and attach pick locations 7-10.

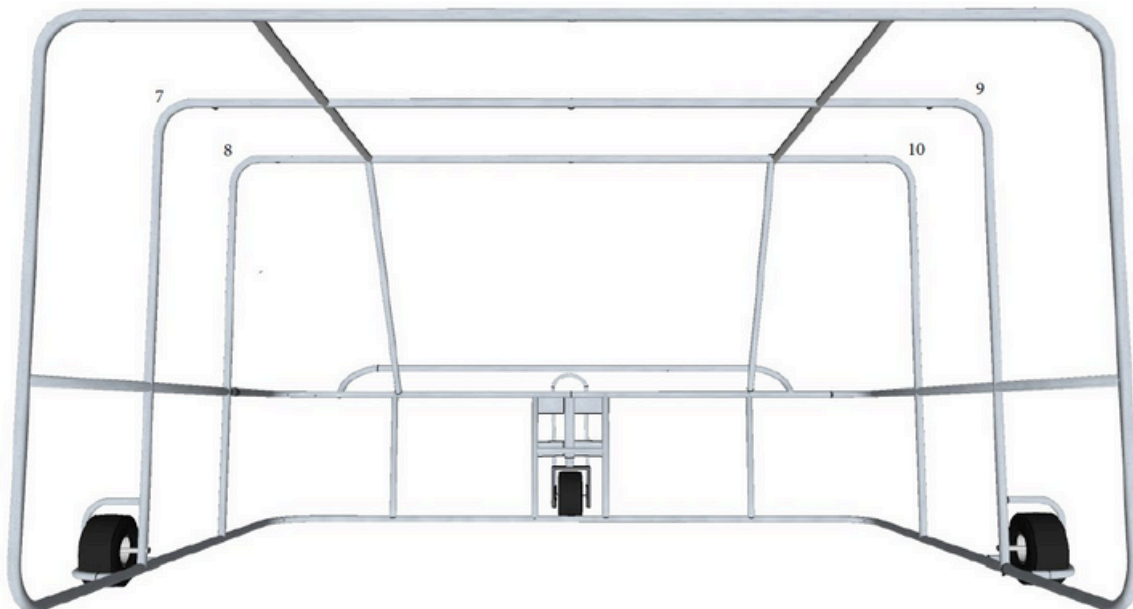

# BASEBALL TURTLES



**828-820-8644**



**800-487-7432**

BaseballTips, Inc.

Suppliers of Sports Equipment & Hydration Products - Since 1999



**828-820-8600**

Finish hanging the netting with remaining clips.

**On the front bar, use the LONG, HD zip ties provided, to attach the netting around the entire front bar. There needs to be only two mesh bars in between every zip tie. (Zip tie, space, space, zip tie, space, space, zip tie....)**

After the front of the net is completely attached to the front bar with the zip ties every third bar, then refer to the Vinyl/Padding Install Page and install all padding and vinyl for the last letter (L)

Use provided zip ties to attach the vinyl backdrop to the rope line. There are three extra snap clips provided to help with the moving of the super turtle. These clips are designed to be placed in front of each wheel on the lead rope bottom.

When moving the turtle simply grab the clip and attach to the net above the wheels to help bring net off of ground.

Once stationary remove from net and allow to fall back to the ground.

#### INCLUDED HARDWARE

#### DESCRIPTION

---

HEXBOLTS WITH NUTS FOR FRAME ASSEMBLY

(4) SHORT HD (8in) ZIP TIES FOR VINYL WRAP and Ball Stop (bag of 100)

(1) LONG HD (14in) ZIP TIES FOR FRONT BAR NETTING (bag of 100)

Snap Clips (bottom of net to clip up when moving)