

# BASEBALL TURTLES



**828-820-8644**



**800-487-7432**

BaseballTips, Inc.

Suppliers of Sports Equipment & Hydration Products - Since 1999



**828-820-8600**

## Budget Batting Turtle


| ITEM | DESCRIPTION               | QTY       | PART #     |
|------|---------------------------|-----------|------------|
| A    | 190" TUBES - 5 PIECES     | 1 SET (5) | ZBS4CRS    |
| B    | RIGHT SIDE ASSEMBLY       | 1 EA      | ZBS4RHT    |
| C    | LEFT SIDE ASSEMBLY        | 1 EA      | ZBS4LFT    |
| D    | TRANSPORT DOLLEY          | 1 EA      | ZBSDOLLEY  |
| F    | NET                       | 1 EA      | 1197518    |
| G    | 32" TUBES - 4 PIECES      | 1 SET (4) | ZBS4432X   |
| H    | 126" UPRIGHT L-SHAPE TUBE | 2 EA      | ZBS4UPRT   |
| I    | 101" UPRIGHT L-SHAPE TUBE | 2 EA      |            |
| J    | 65" UPRIGHT L-SHAPE TUBE  | 2 EA      |            |
| K    | 54" BRACE TUBE            | 2 EA      | ZBS4RIS    |
| L    | 69" BRACE TUBE            | 4 EA      |            |
| M    | LOCKING COLLARS           | 16 EA     | ZX1450009  |
| N    | LOCK NUT 5/8"             | 2 EA      | Z060625NLN |
| O    | FLAT WASHER 5/8"          | 2 EA      | Z070062FCW |
| P    | HEX KEY 3/16"             | 1 EA      | Z031187HEX |
| Q    | HEX KEY 5/32"             | 1 EA      | Z031156HEX |
| R    | HEX KEY 5 MM              | 1 EA      | ZX3800005  |
| S    | NYLON TIE WRAPS 11"       | 100 EA    | ZX3900011  |
| T    | T-FITTINGS                | 24 EA     | ZX1450002  |
| U    | HEX BOLT 5/8" X 6.5"      | 2 EA      | Z041625650 |
| V    | SHAFT COLLAR 5/8"         | 2 EA      | Z037062COL |
| DG   | 16" WHEEL                 | 3 EA      | ZX2800006  |

ZBS4HDW

ZBSWHEEL




- Attach Rear Wheel and Transport Dolly as shown in **Backstop Transport Dolly** instructions. You can now tighten all the fittings on Back Section.
- Place the 6 L-shaped tubes (**ITEMS H, I, J**) as shown. Do not tighten Collars at this time.
- Take the remaining 3 - 190" tubes (**ITEM A**) and slide the required amount of T-fittings and locking Collars on them.
- Using a ladder attach the 190" tubes to the L-shape tubes as shown.
- Insert the 54" tubes (**ITEM K**) into the T-fittings and tighten at this time. **NOTE:** The placement of the T-fittings.
- Insert the 4 - 69" (**ITEM L**) into the T-fitting as shown and tighten at this time. **NOTE:** The placement of the T-fittings.

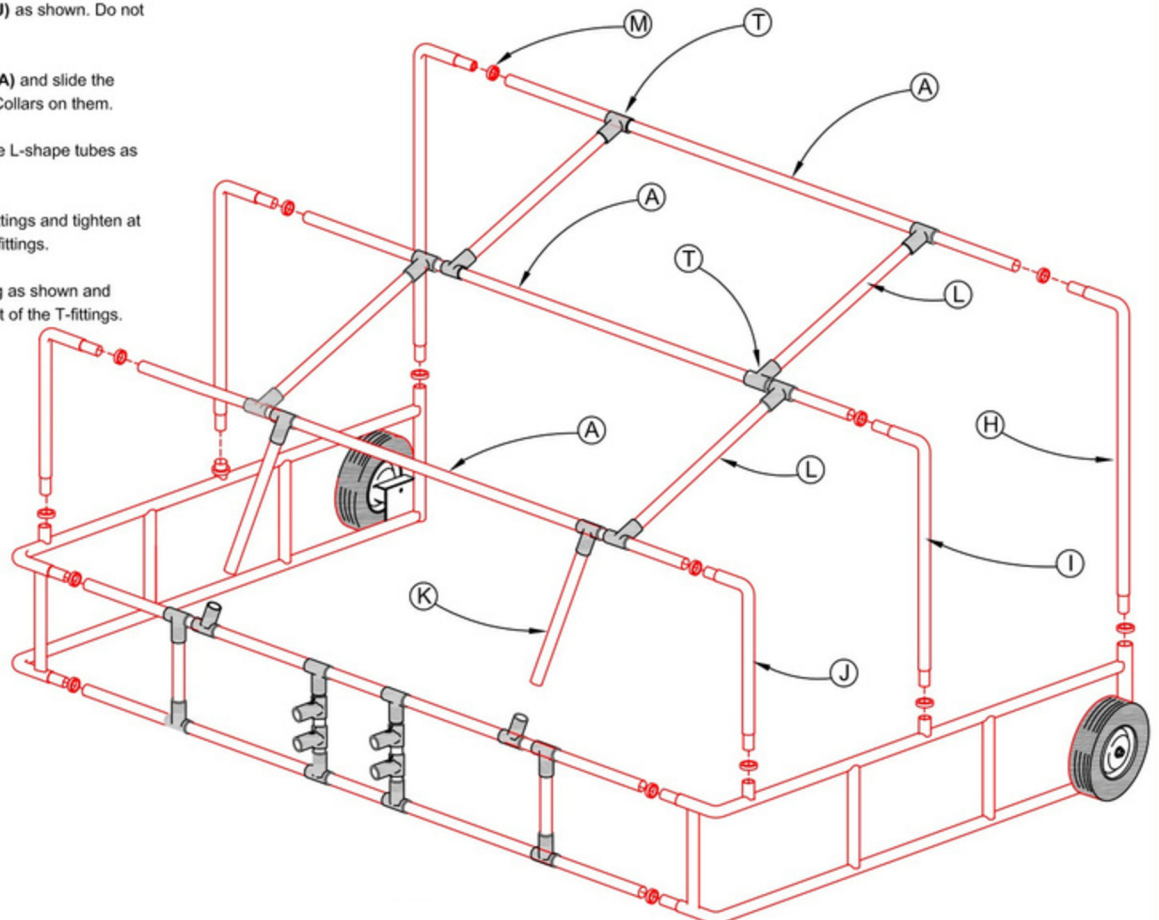


### STEP #1

- On level ground assemble the Back Section using 2 - 190" tubes (ITEM A), 14 - T-fittings (ITEM T), 4-32" tubes (ITEM G) and 4 - Locking Collars (ITEM M) as shown. Do not tighten T-fittings at this time.
- Now attach Side Assemblies (ITEMS B, C) to the Back Section as shown.
- Attach Front Wheels (ITEM DG) as shown.

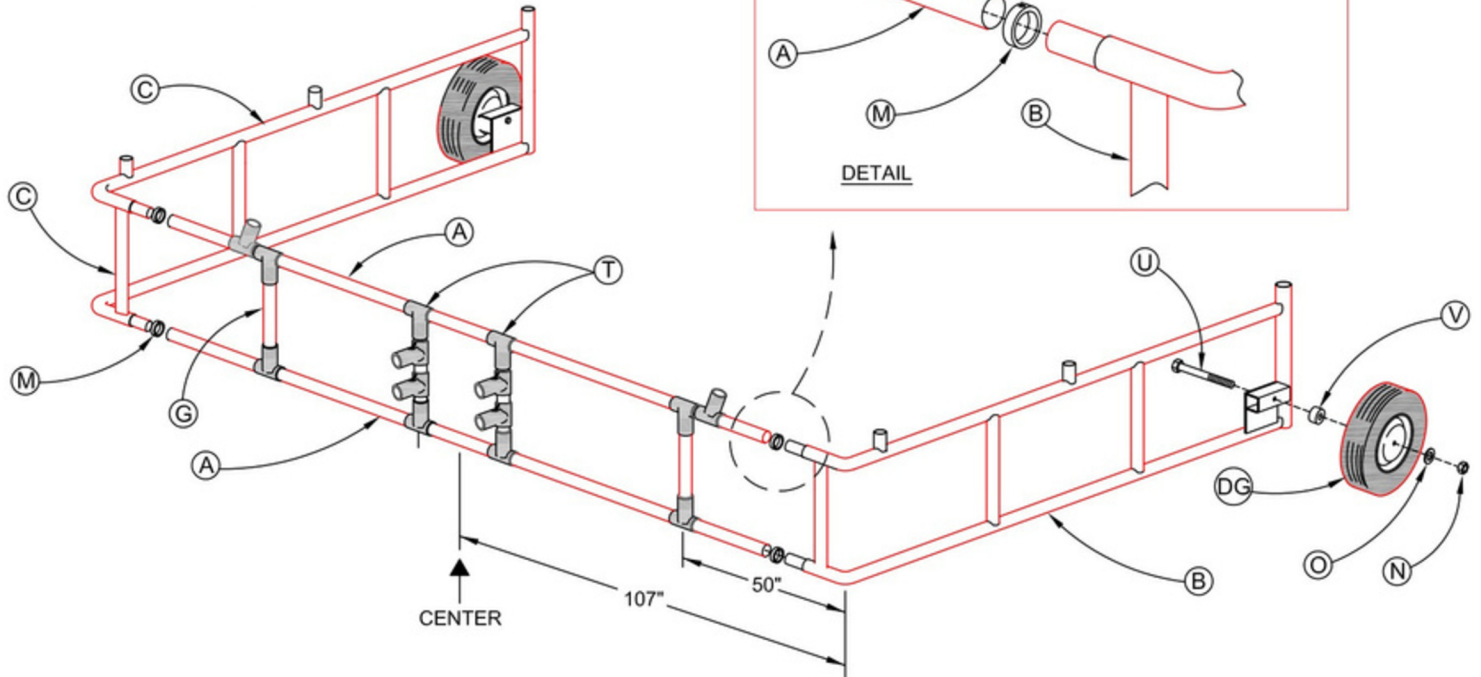

### STEP #3

- Lay out net and find the front opening, the top front corners are marked.
- Using the nylon tie wraps (ITEM S) attach net at a few key points to assure you have it on straight.
- Use Twine provided with net to permanently lace full perimeter of base and front face of backstop.
- Hang the separate piece of baffle netting provided, behind the batter approximately one foot from the back of cage.

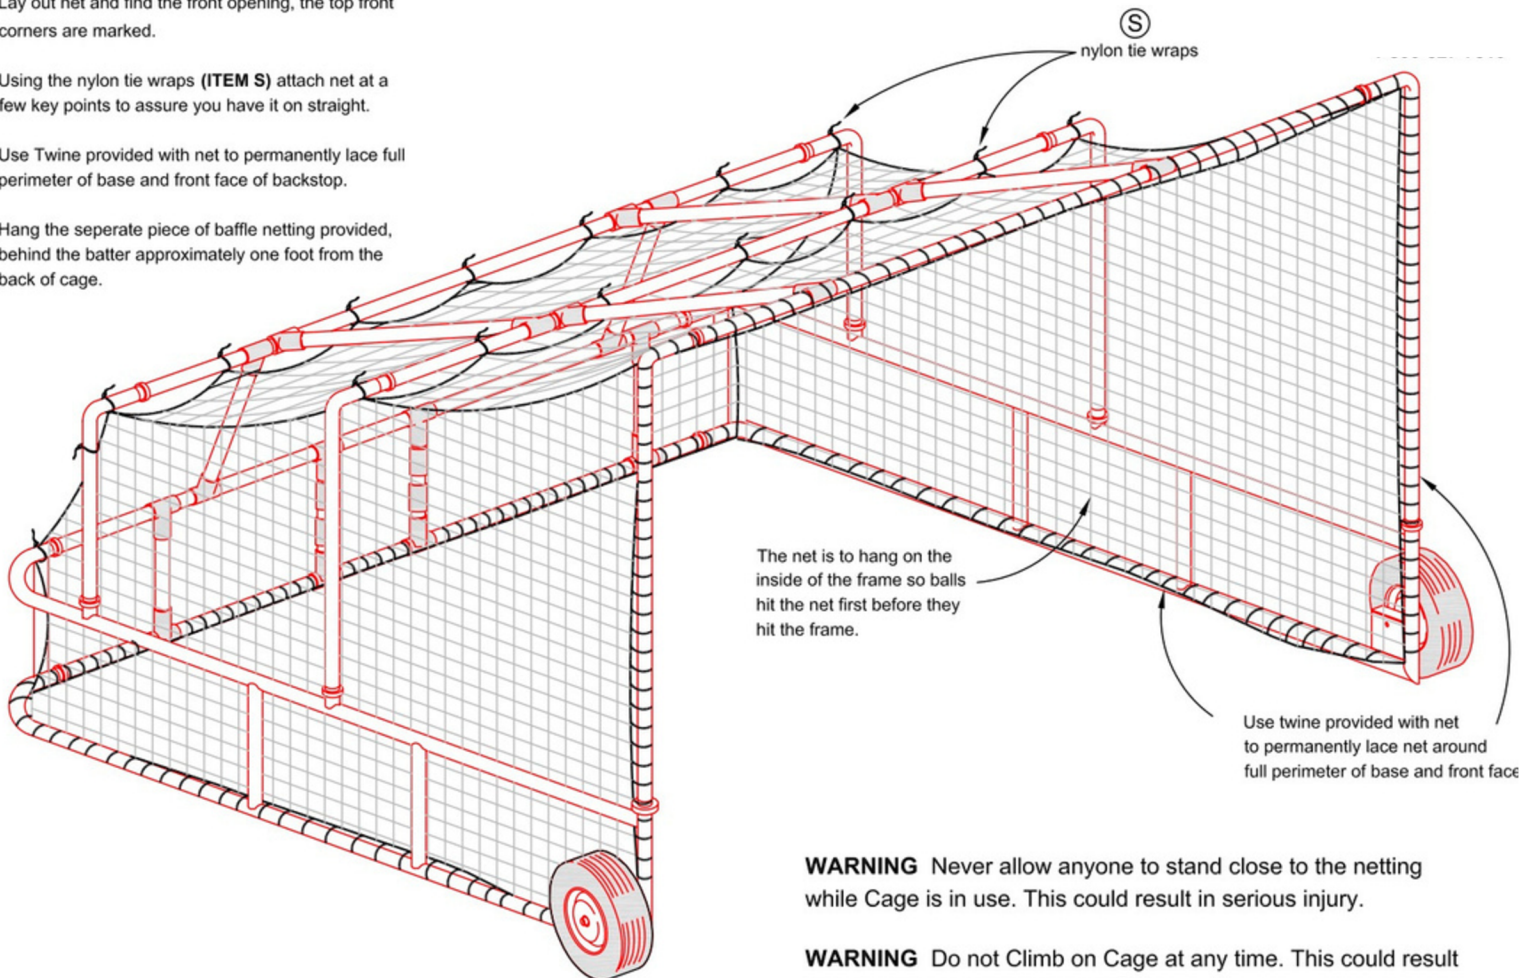

**WARNING** Never allow anyone to stand close to the netting while Cage is in use. This could result in serious injury.

**WARNING** Do not Climb on Cage at any time. This could result in serious injury or damage to Cage.